

How to flash a new BIOS

- **1. Step:** Download and view the document *Dnp-Flash-Update.pdf* from the web page <http://www.dilnetpc.com/dnp0017.htm>.
- **2. Step:** Download the BIOS archive file form <http://www.dilnetpc.com>. For the DNP/1486 next step is Step 3. For the ADNP/1486 next step is Step 4.
- **3. Step:** For the DNP/1486: Point your web browser to the URL <http://www.dilnetpc.com/dnpbios.zip> and download the file *dnpbios.zip*. You need this file later on the DNP/1486. Next is Step 5.
- **4. Step:** For the ADNP/1486: Point your web browser to the URL <http://www.dilnetpc.com/adnpbios.zip> and download the file *adnpbios.zip*. You need this file later on the DNP/1486. Next is Step 5.
- **5. Step:** Set-up your (A)DNP/1486 with ROM-DOS. The steps for flashing the new BIOS needs ROM-DOS. You find a ROM-DOS image on your DIL/NetPC (A)DNP/1486 starter kit CD-ROM. Then follow the instructions in the document *Dnp-Flash-Update.pdf*.